



Fujitsu LifeBook N3510 Fan Replacement

Written By: Neil Daniels





TOOLS:

- [Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [Magnetic Project Mat](#) (1)
-

Step 1 — Battery



- Start by locating the two clips on the bottom of the computer that support the battery.

Step 2



- Use your fingers to push the clips inward and then upward.
- Lift the battery out of the computer.

Step 3 — Hinge Cover



- Use a spudger to lift the back of the hinge cover on the left and right sides of the computer.

Step 4



- Lay the computer flat on a stable surface with the monitor pointing away from you.


Step 5



- Use a spudger to partially lift the hinge cover.

Step 6



 The hinge cover has a ribbon cable that is attached to the motherboard. To prevent damage, lift the hinge cover slowly.


- Lift the hinge cover out of place enough to expose the ribbon cable.


Step 7



- Disconnect the ribbon cable from the motherboard and remove the hinge cover from the computer.

Step 8 — Keyboard

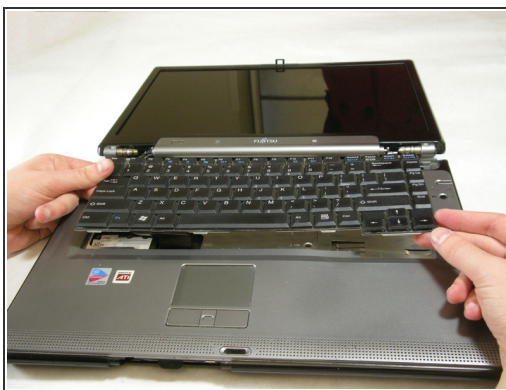

 The keyboard has a ribbon cable that is attached to the motherboard. To prevent damage, lift keyboard slowly.

- Lift the keyboard enough to expose the ribbon cable.

Step 9




- Use a spudger to release the ribbon cable from the motherboard.

Step 10



- Carefully remove the keyboard after the ribbon has been detached.

Step 11 — Metal Motherboard Cover

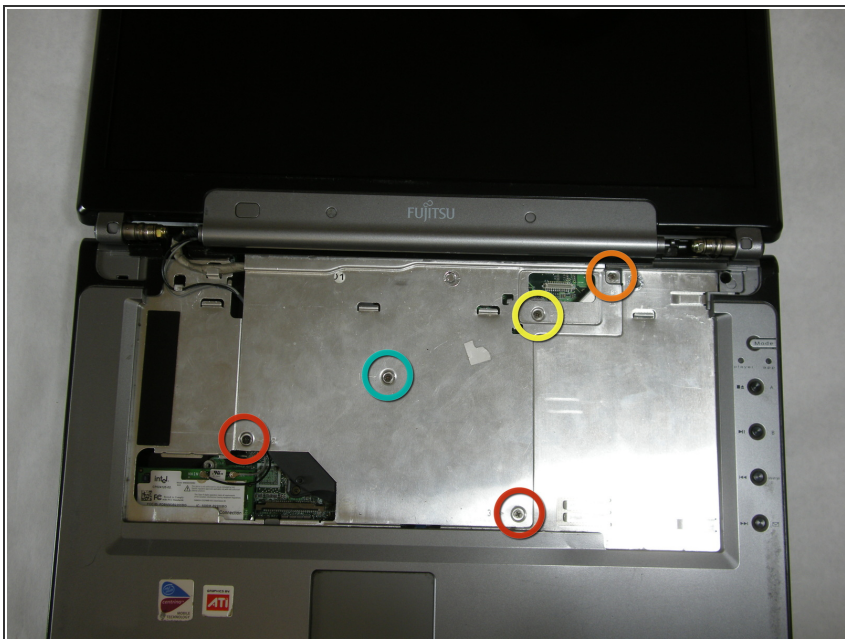


- Remove the following screws, all labeled "3."
 - Two 8.63mm screws.
 - One 7.65mm screw.
 - One 5.74mm screw.
- Remove the following screw, labeled "15."
 - One 17.81mm screw.

Step 12



- Lift the cover with fingers and remove.

Step 13 — Fan

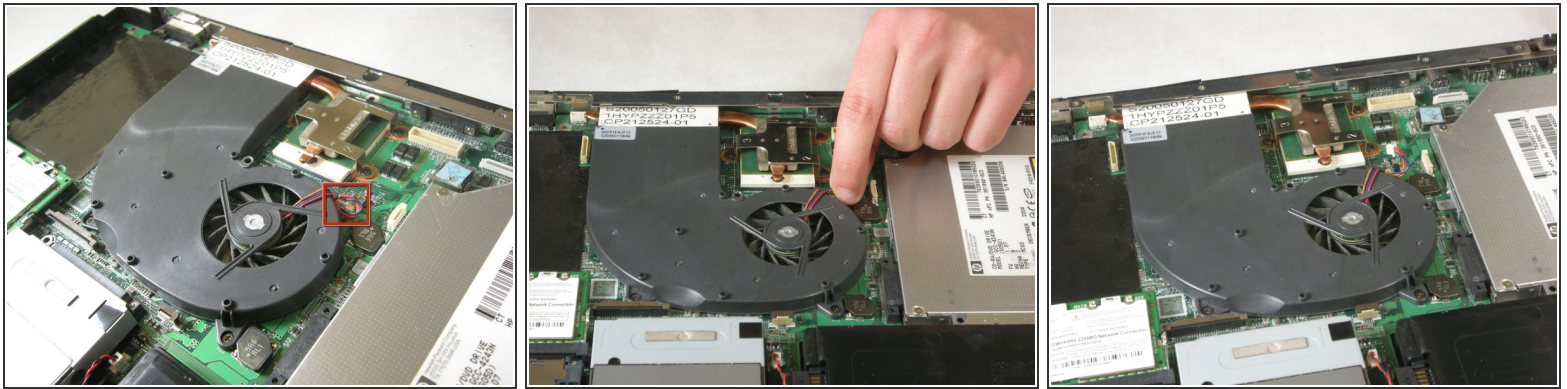

- Detach fan cable from motherboard.

Step 14



- Remove labeled screws.

Step 15



- Remove fan.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 06:46:48 AM.